

EntraGuard® Gold: Firmware v7.3.04

1.0 EntraGuard® Gold Firmware v7.3.04

EntraGuard® Gold Firmware v7.3.04 is the initial release of the EntraGuard Gold controller.

1. A “Set Microphone Vol” menu has been added to the initial start menu. To set the microphone volume, following power up of the EntraGuard® unit, select 3 on the keypad. The “Set Microphone Vol” menu appears. Press the 1 key to set the “New” volume. (Keri recommends beginning with the volume set at 1 and then adjust according to the environment.) Next select the * key to return to the initial start menu. Proceed to set the controller address as shown in the EntraGuard® Gold Quick Start Guide (P/N 01801-001). Once the unit has been initialized, test the volume by contacting a tenant. Adjust volume accordingly.
2. The ? on the keypad has been set up to give brief instructions on how to use the EntraGuard® keypad to find and call a tenant.

2.0 Compatibility

- Firmware release 7.3.04 and PIC v1.04) can only be used in EntraGuard® Gold controllers. The leading '7' digit in the release number indicates that this release is for the EntraGuard® Gold.
- Firmware PROM 7.3.04 and PIC v1.04 are interconnected and both must be installed on an EntraGuard® controller for proper operation.
- Firmware release 7.3.04 and *Doors* v3.74 (or higher) must be used together to enable all the new features offered by this firmware release.
- *Doors* v3.74 only supports PXL-250 controllers with v6.3.20 or greater firmware or EntraGuard® Gold controllers. PXL-100 controllers are not compatible with *Doors* v3.74.

NOTE: For additional compatibility information, see the [Compatibility Guide - Series 3](#) (P/N 01876-001).

3.0 Known Issues

1. Remote commands are **not** enabled in this release. Remote commands allow a user to call the EntraGuard® unit from an external telephone (one not a part of the building controlled by the EntraGuard® unit) and execute commands.
2. The unit will not automatically dial out when the event buffer is full. Collection of events from the unit must be done manually (see the [Doors Users Guide](#) P/N 01821-002, for instructions on how to collect events).
3. The EG master controller will report false com fails and restores for slave controllers. Turn off com fail and restore event reporting (see the [Doors Users Guide](#) P/N 01821-002, for instructions on how to change event reporting).



EntraGuard® Gold: Firmware v7.3.04

Release Notes

EntraGuard®

This page is intentionally left blank.



1530 Old Oakland Road, Suite 100
San Jose, CA 95112 USA
(800) 260-5265 (408) 451-2520 FAX (408) 441-0309
Web: <http://www.kerisys.com> E-mail: sales@kerisys.com

01809-002 Rev. A

Page 2 of 2