

# PXL-500 / PXL-510: Firmware v8.5.19

## Release Notes

---

### 1.0 Firmware Changes

This firmware release corrects four issues.

1. Corrected PXL-500 interoperability with an SB-G satellite board. SB-G behavior is limited to second door control.
2. Corrected PXL-500-LC interoperability with an SB-G satellite board and an SB-593 satellite board. SB-G behavior is limited to second door control. SB-593 behavior is jumper-selectable between second door control or general I/O.
3. Corrected PXL-510-LC interoperability with an SB-G satellite board. SB-G behavior is limited to second door control.
4. Corrected PXL-500-G interoperability with an SB-593. SB-593 behavior is jumper-selectable between second door control or general I/O.

### 2.0 Known Issues

There are no known issues.

### 3.0 Compatibility

You must use Doors v4.71 in conjunction with corresponding, new, controller firmware releases to take advantage of all the additions, improvements, and bug fixes. Please refer to the following, supported hardware/firmware table.

**Table 1: Supported Hardware and Firmware**

Product	Supported in Software	Firmware	PIC
PXL-500-1/510-1	Yes	v8.5.19 (new)	v2.11 (existing)
PXL-G/LC	Yes	v8.5.19 (new)	v2.11 (existing)
SB-593-1	Yes		v1.2 (new)
SB-G/LC	Yes		v1.2 (new)
PXL-500/510 (obsolete product replaced by PXL-500-1)	Yes	v8.5.19 (new)	
SB-593 (obsolete product replaced by SB-593-1)	Yes		v1.2 (new)

*NOTE: For all controllers, you can use downlevel firmware revisions, but new program additions, improvements, and bug fixes will not be available for use as these features are not implemented in the downlevel firmware releases.*

# PXL-500 / PXL-510: Firmware v8.5.19

## Release Notes

---

### Rules For Mixed Controller Type Networks (mixing PXL-500s, PXL-250s, and EntraGuards)

- To use the Alarm Control feature, a PXL-510 must be the master controller.
- To use the Temp Cards feature, a PXL-500 or PXL-510 must be the master controller.
- A PXL-500 or PXL-510 may be used as a slave controller on a network with a PXL-250 master controller, however features that require a PXL-500 or PXL-510 to be the master controller (e.g. Temp Users and Alarm Control) will not be available.
- A PXL-500 or PXL-510 may be used as a slave controller with any EntraGuard controller as the master controller.
- If Alarm Control integration with a NetworX NX-8E alarm panel will be used, a PXL-510 **MUST** be used as the master.
- When implementing a PXL-500 system that will also incorporate EntraGuard telephone entry, the telephone entry unit is no longer required to be the master.

### Contact Keri Systems:

<b>Keri USA</b>	<b>Keri UK, Ireland, Europe</b>
2305 Bering Drive San Jose, CA 95131	Unit 17 Park Farm Industrial Estate Ermine Street Buntingford Herts SG9 9AZ UK
Telephone: (800) 260-5265 (408) 435-8400	Telephone: + 44 (0) 1763 273 243
Fax: (408) 435-7163	Fax: + 44 (0) 1763 274 106
Web: <a href="http://www.kerisys.com">www.kerisys.com</a>	Web: <a href="http://www.kerisystems.co.uk">www.kerisystems.co.uk</a>
E-mail: <a href="mailto:sales@kerisys.com">sales@kerisys.com</a> <a href="mailto:techsupport@kerisys.com">techsupport@kerisys.com</a>	E-mail: <a href="mailto:sales@kerisystems.co.uk">sales@kerisystems.co.uk</a> <a href="mailto:tech-support@kerisystems.co.uk">tech-support@kerisystems.co.uk</a>

End of document.