

All switches ON
is Device ID 0

Device ID 0 is reserved
for TCP/IP LAN use.

Slide the **raised part**
of the switch **UP**
to set the switch **ON**.


0		16		32		48		64		80		96		112	
1		17		33		49		65		81		97		113	
2		18		34		50		66		82		98		114	
3		19		35		51		67		83		99		115	
4		20		36		52		68		84		100		116	
5		21		37		53		69		85		101		117	
6		22		38		54		70		86		102		118	
7		23		39		55		71		87		103		119	
8		24		40		56		72		88		104		120	
9		25		41		57		73		89		105		121	
10		26		42		58		74		90		106		122	
11		27		43		59		75		91		107		123	
12		28		44		60		76		92		108		124	
13		29		45		61		77		93		109		125	
14		30		46		62		78		94		110		126	
15		31		47		63		79		95		111		127	

BioPointe Device ID Addressing

BioPointe Device ID Addressing

01956-002

128		144		160		176		192		208		224		240	
129		145		161		177		193		209		225		241	
130		146		162		178		194		210		226		242	
131		147		163		179		195		211		227		243	
132		148		164		180		196		212		228		244	
133		149		165		181		197		213		229		245	
134		150		166		182		198		214		230		246	
135		151		167		183		199		215		231		247	
136		152		168		184		200		216		232		248	
137		153		169		185		201		217		233		249	
138		154		170		186		202		218		234		250	
139		155		171		187		203		219		235		251	
140		156		172		188		204		220		236		252	
141		157		173		189		205		221		237		253	
142		158		174		190		206		222		238		254	
143		159		175		191		207		223		239		255	

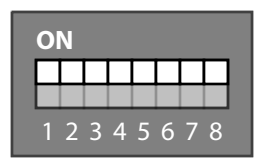

Device ID 255
(all switches OFF)
cannot be used.

Slide the **raised part**
of the switch **UP**
to set the switch **ON**.

