

All switches ON
is Device ID 0

Device ID 0 is reserved
for TCP/IP LAN use.

Slide the **raised part**
of the switch **UP**
to set the switch **ON**.

0	16	32	48	64	80	96	112
1	17	33	49	65	81	97	113
2	18	34	50	66	82	98	114
3	19	35	51	67	83	99	115
4	20	36	52	68	84	100	116
5	21	37	53	69	85	101	117
6	22	38	54	70	86	102	118
7	23	39	55	71	87	103	119
8	24	40	56	72	88	104	120
9	25	41	57	73	89	105	121
10	26	42	58	74	90	106	122
11	27	43	59	75	91	107	123
12	28	44	60	76	92	108	124
13	29	45	61	77	93	109	125
14	30	46	62	78	94	110	126
15	31	47	63	79	95	111	127


BioPointe Device ID Addressing

01956-002

BioPointe Device ID Addressing

01956-002

128		144		160		176		192		208		224		240	
129		145		161		177		193		209		225		241	
130		146		162		178		194		210		226		242	
131		147		163		179		195		211		227		243	
132		148		164		180		196		212		228		244	
133		149		165		181		197		213		229		245	
134		150		166		182		198		214		230		246	
135		151		167		183		199		215		231		247	
136		152		168		184		200		216		232		248	
137		153		169		185		201		217		233		249	
138		154		170		186		202		218		234		250	
139		155		171		187		203		219		235		251	
140		156		172		188		204		220		236		252	
141		157		173		189		205		221		237		253	
142		158		174		190		206		222		238		254	
143		159		175		191		207		223		239		255	

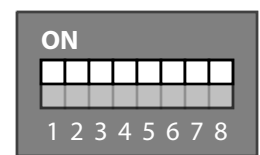

Device ID 255
(all switches OFF)
cannot be used.

Slide the **raised part**
of the switch **UP**
to set the switch **ON**.

